
#### 9) UPDATE YOUR PINSOUND BOARD

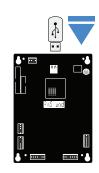


Update the firmware of your PinSound board

Go to www.pinsound.org/help

Be sure to play with the latest firmware update!

#### (10) CHECK LED STATUS

Turn your machine ON, wait for the system to load and check Motion Control LEDs

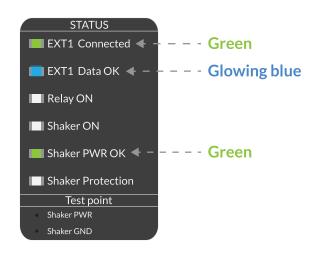

Full LED status information on www.pinsound.org/help

#### (11) ENJOY!



Have fun with your new shaker!

Installation video Firmw are update Guide Q&A

www.pinsound.org/help



# **PinSound Motion** Control



# **Shaker kit for Bally Williams WPC 89/DCS**


## ⟨ ⊗⟩ KIT CONTENT









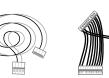

Shaker motor

Plastic cover

Control wire

Shaker power Power splitter

































7/32" 5.5 mm drill bit Screwdriver

Hammer


1)PREPARATION

### **CLEAN INSTALLATION AREA**

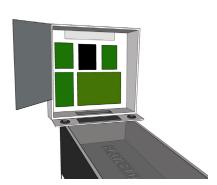

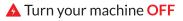

Open backbox

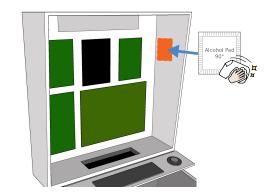



We recommend to install the board on the inner right side of the backbox

Clean the area with the alcohol pad

#### (3) MOUNT ADHESIVE FEET

#### INSTALL MOTION CONTROL

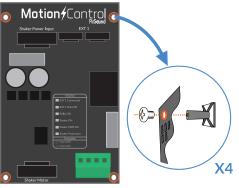

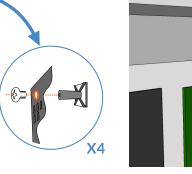


Mount the 4 adhesive feet and secure them with screws



Stick the board to the inner right side of the backbox

#### (5) CONNECT MOTION CONTROL

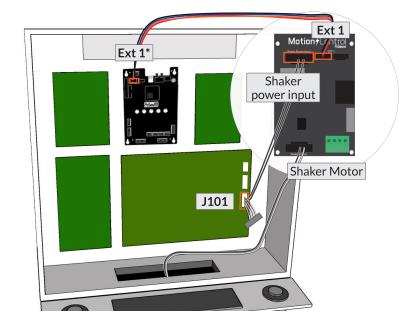


- Connect "Ext1" to PinSound board "Ext1"
- (\* "Extension" on PinSound v1)
- Connect "Shaker Power Input" to J101 with the splitter
- Connect "Shaker Motor" wire and lay it through

#### (6) PREPARE THE DRILL AND THE TEMPLATE



7/32" (5.5mm) drill bit

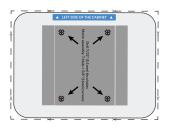


Cut off the WPC drill template

#### (7) PREPARE THE SHAKER FITTING




Place the template as indicated\* and drill the 4 holes

(\* you may have to choose another position to fit in your cabinet)

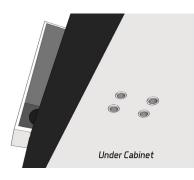


Hammer down the 4 T-Nuts under the cabinet


#### (8)INSTALL THE SHAKER

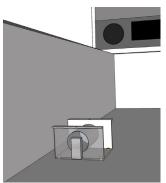

Place the shaker and secure it with the 4 screws

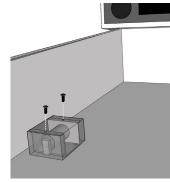

Place the shaker cover and secure it with the 2 screws

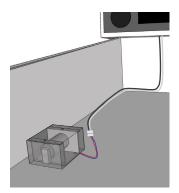

Connect shaker power wire