


# PinSound

## Headphones Station MASTER for PLUS/NEO/XL



0 713091 604988  
ps-hps-master-plusneoxl

### 1 OFF

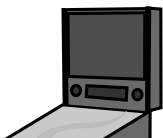

### 2 OPEN BACKBOX




### 3 INSTALL THE HEADPHONES STATION MASTER

A : Install the Headphones Station MASTER  
on the machine's front leg with the leg screws



B : Attach the wiring under the cabinet

C : Run it behind then inside the backbox



*Tip : You can install the  
Headphones Station MASTER  
on the left or right machine's leg.*

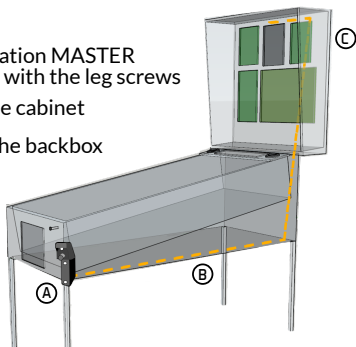


### 4 CONNECT THE ADAPTER INTO EXT1 + EXT2 PORTS

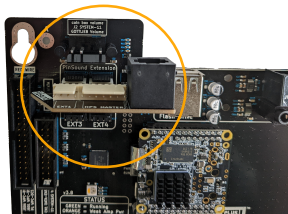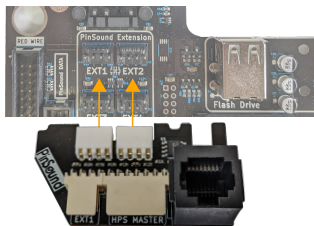



## 5 CONNECT THE SHORT RJ45 CABLE

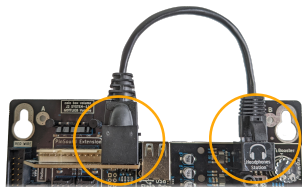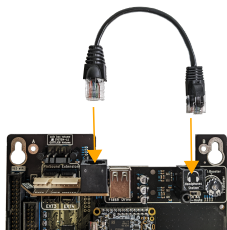

## 6 CONNECT THE HEADPHONES STATION MASTER

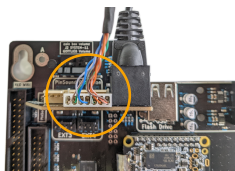

## 7 MOTION CONTROL BOARD? CONNECT EXT1

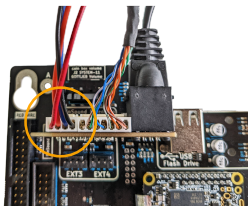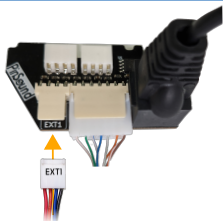


## 8 ADJUST HEADPHONES BOOSTER

Move the switch or turn the knob to adjust the headphones booster.



NEO

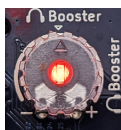

PLUS/XL

## NEED HELP?

Installation video  
Firmware update  
Guide  
Q&A

[www.pinsound.org/support](http://www.pinsound.org/support)

