



Headphones Station MASTER for STERN Spike 2

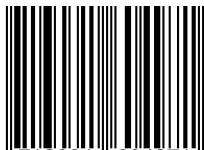


0 713091 604971
ps-hps-master-spike2

1 POWER OFF

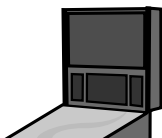

2 OPEN BACKBOX

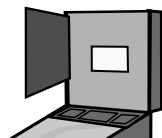


3 INSTALL THE HEADPHONES STATION MASTER

A : Install the Headphones Station MASTER on the machine's front leg with the leg screws



B : Attach the wiring under the cabinet

C : Run it behind then inside the backbox

Tip : You can install the Headphones Station MASTER on the left or right machine's leg.

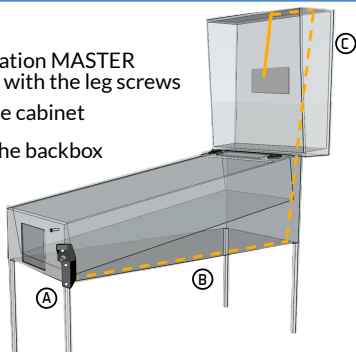

4 CONNECT THE HPS MASTER TO THE CPU BOARD

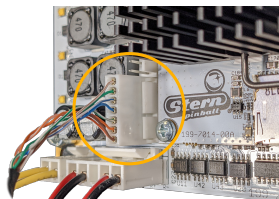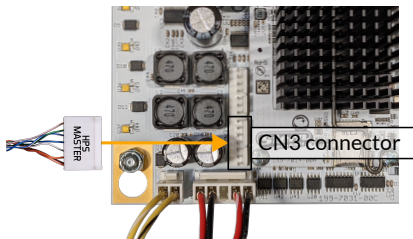

5 MACHINE ON 6 ADVANCED SETTINGS



Go to :

Settings menu / Standard Adjustements (S.P.I.).
Setting "EXTERNAL VOLUME KNOB FUNCTION".

7 ENJOY!



You can now adjust the volume with the knob on the Headphones Station MASTER.

Tip : When you connect your headphones, the pinball machine will automatically mute the main speakers (this can be overridden).



NEED HELP?

Installation video
Firmware update
Guide
Q&A

www.pinsound.org/support

