


PinSound

pinsound.org • stereo 2.1 wiring kit


Stereo wiring kit

Optional for BALLY, WILLIAMS, SEGA, STERN
(DATA-EAST is stereo pre-wired)

KIT

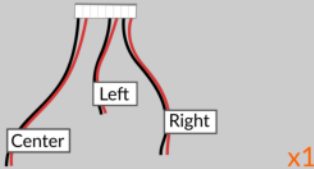

TOOLS

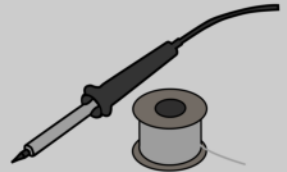

1 UNPLUG


WPC 89 → J504, J505

WPC DCS → J1, J2

WPC 95 → J504, J505

System 11 → J5


2 CONNECT NEW WIRING

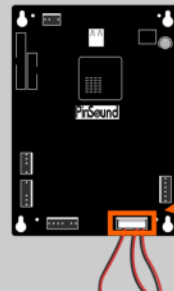


STEREO 2.1
SPEAKERS

3 UNSOLDER

Speaker left

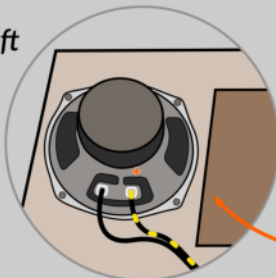


Speaker right

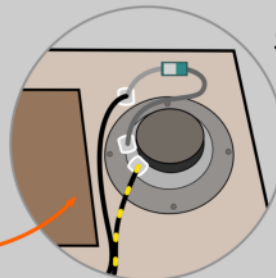


4 SOLDER

Speaker left

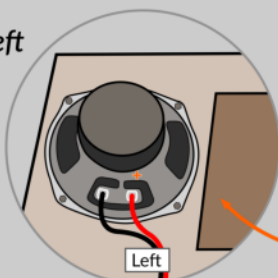


Speaker right

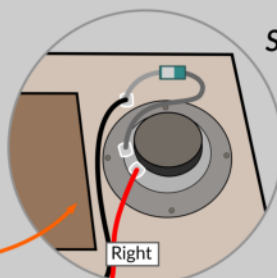


5 REMOVE OLD

Speaker center

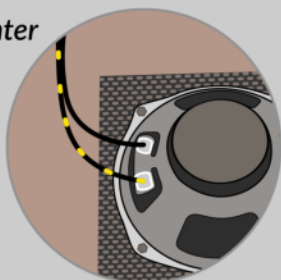


6 CONNECT NEW

Speaker center

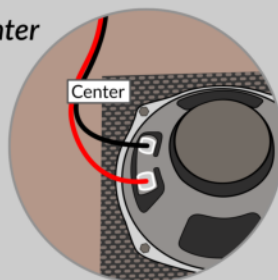

7 ORGANIZE

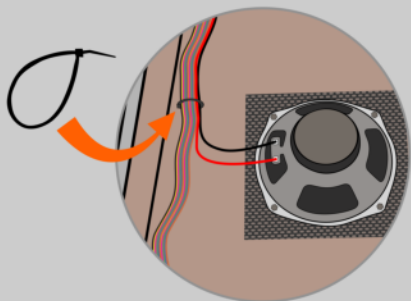

8 ON



ENJOY!