

PinSound

pinsound.org • speakers installation

Stern: Whitestar


KIT

PS-SPK4



x2

PS-SW8

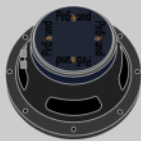

x1



x8



x8




x1

TOOLS




1 OFF

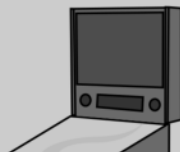

2 OPEN BACKBOX





3 REMOVE WIRES & ORIGINAL SPEAKERS

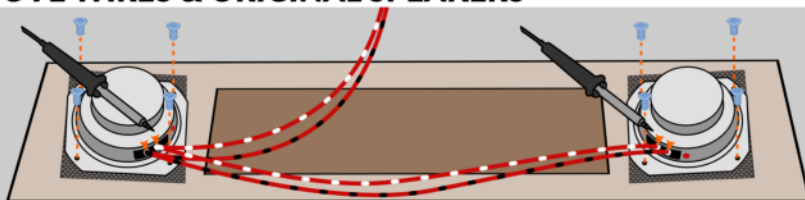


4 SCREW PINSOUND SPEAKERS




5 RUN STEREO 2.1 WIRES & CONNECT TO SPEAKERS

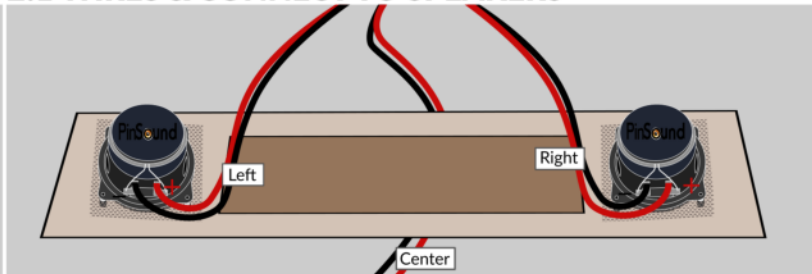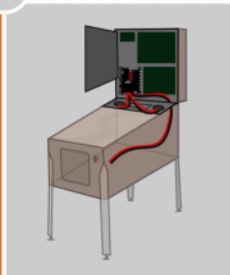



6 CLOSE BACKBOX

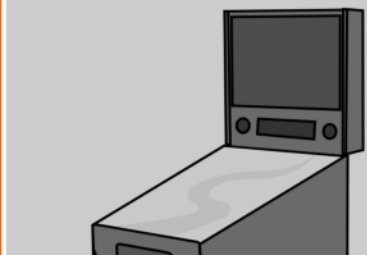


7 OPEN CABINET/RAISE PLAYFIELD

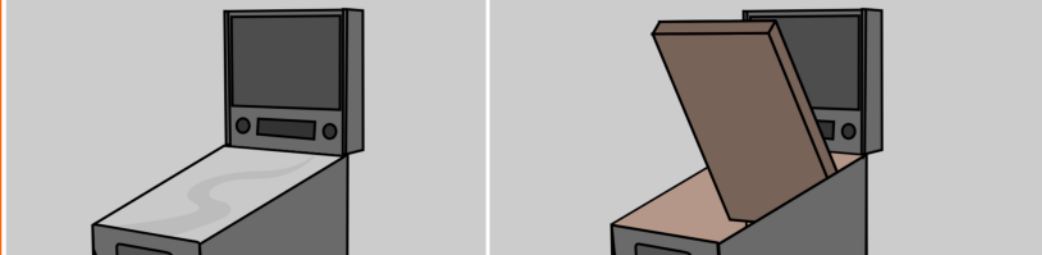



8 REMOVE WIRES/SUBWOOFER

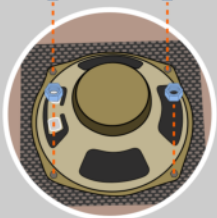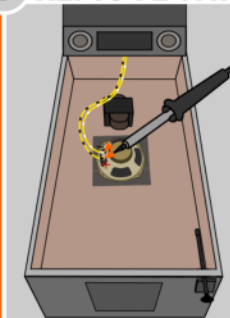

9 SCREW SUBWOOFER

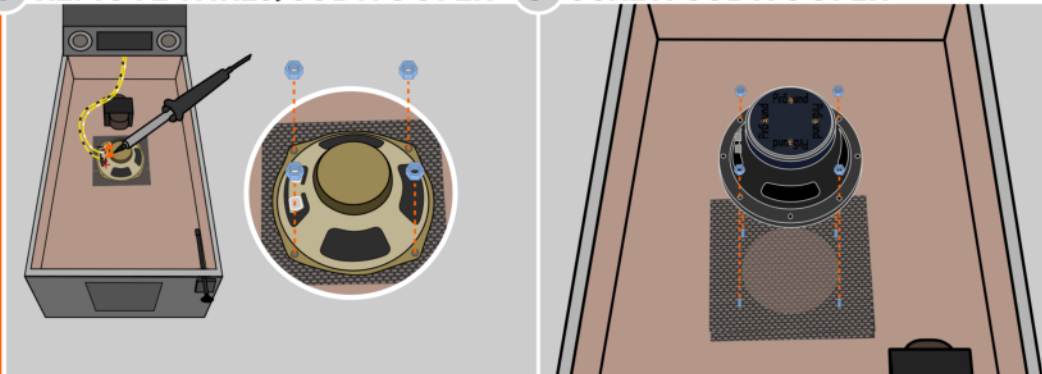

10 CONNECT SUBWOOFER

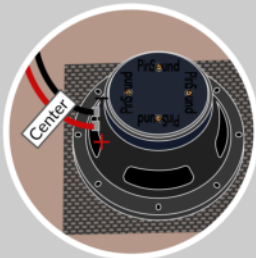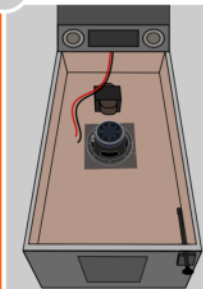

11 ON

