

# PinSound

pinsound.org • speakers installation

## Bally Williams: WPC (89 - DCS - 95)


### KIT




### TOOLS



### 1 OFF

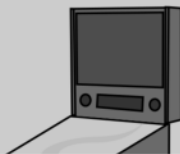


### 2 OPEN BACKBOX

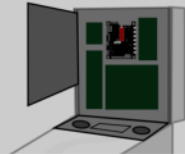



### 3 REMOVE WIRES & ORIGINAL SPEAKERS




### 4 SCREW RIGHT ADAPTER & PIN SOUND SPEAKERS

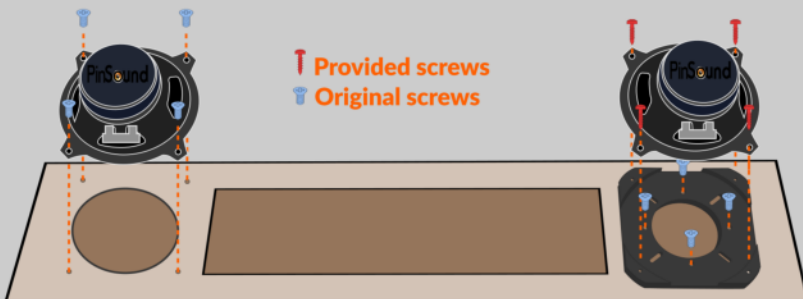


## 5 RUN STEREO 2.1 WIRES & CONNECT TO SPEAKERS

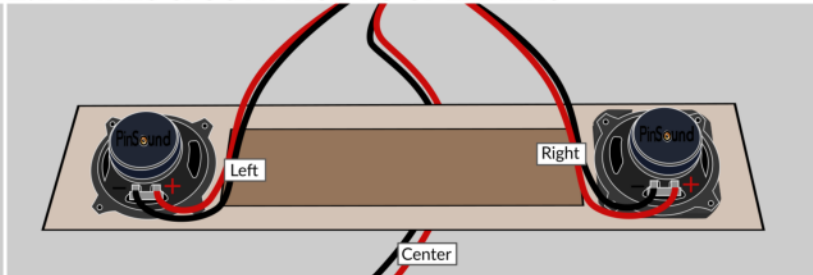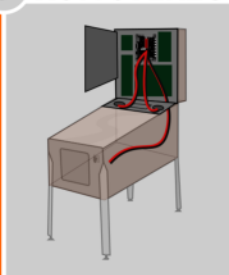




## 6 CLOSE BACKBOX

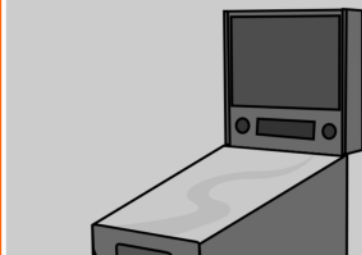



## 7 OPEN CABINET/RAISE PLAYFIELD

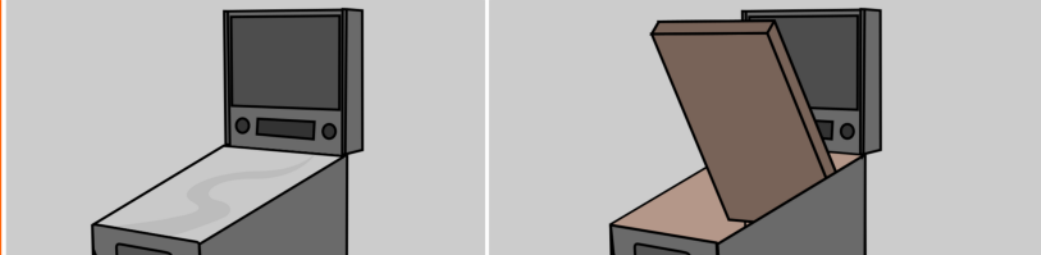

## 8 REMOVE WIRES/SUBWOOFER 9 SCREW ADAPTER/SUBWOOFER

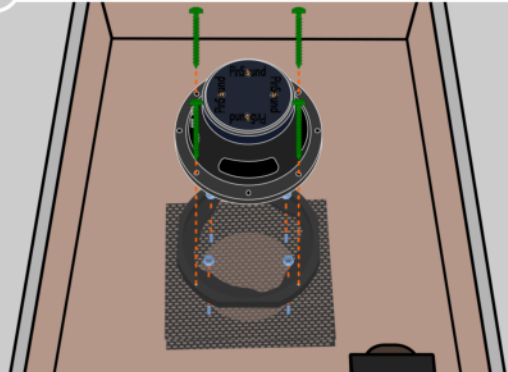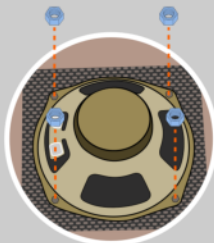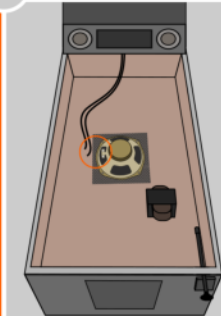

## 10 CONNECT SUBWOOFER

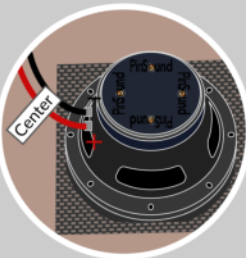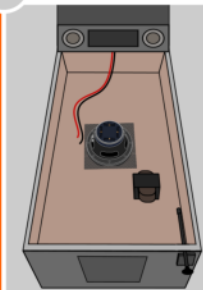

## 11 ON

