

PinSound

Speakers kit

for Bally Williams WPC (89-DCS-95)



0 713325 945597
ps-spk-kit-wpc



KIT CONTENT



This kit is composed of 3 items

PS-SPK5



PS-SW8



WPC 89-DCS-95 MOUNTING SET

- 1 Stereo 2.1 harness wire
- 1 right speaker spacer
- 1 subwoofer spacer
- 4 short screws
- 4 long screws
- Cable zip ties
- Manual



TOOLS

Soldering iron



Screwdriver



5/16 Hex Socket
screwdriver




PREPARATION




Turn your machine **OFF**


- Open backbox
- Access the speaker panel

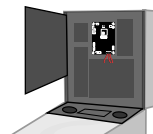

1 REMOVE WIRES & ORIGINAL SPEAKERS

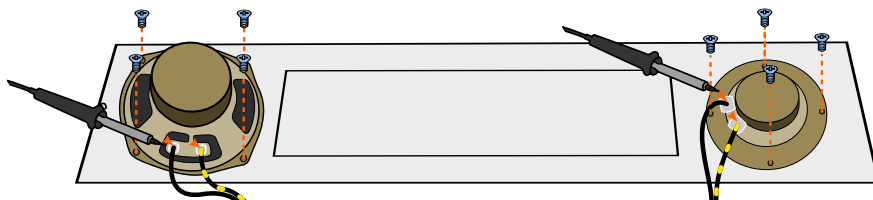


2 SCREW RIGHT ADAPTER & PINSOUND SPEAKERS

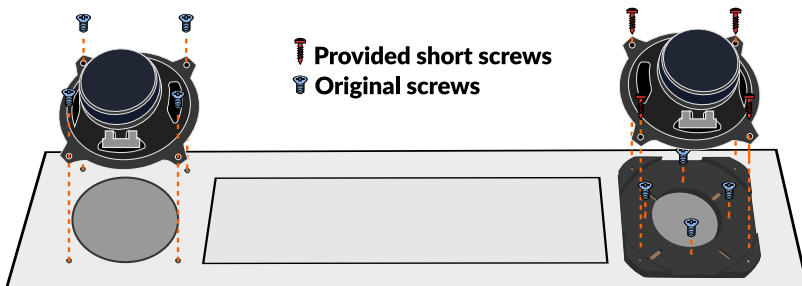


Provided short screws
Original screws


3 RUN STEREO 2.1 WIRES & CONNECT TO SPEAKERS

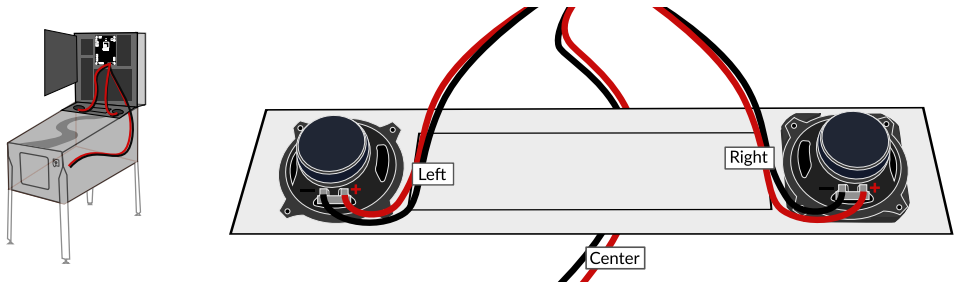


4 CLOSE BACKBOX / OPEN CABINET

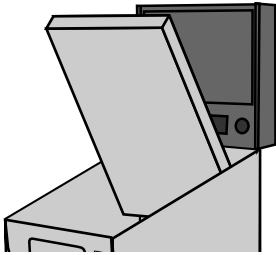


5 REMOVE WIRES & SUBWOOFER

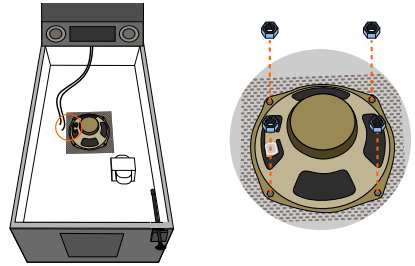


6 SCREW ADAPTER/SUBWOOFER

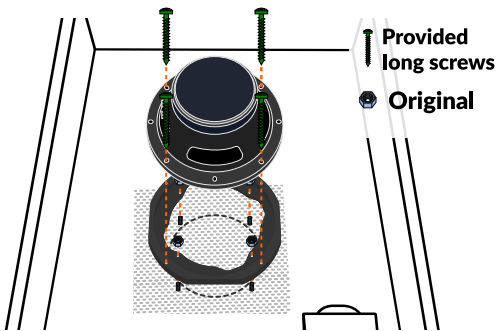

7 CONNECT SUBWOOFER

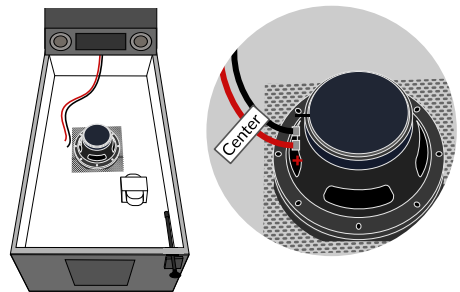

8 TURN YOUR MACHINE ON

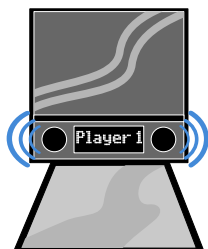

ENJOY!

NEED HELP?

Manuals

Video Tutorials

Questions & Answers

www.pinsound.org/help