



Speakers kit for PLUS & NEO STERN Whitestar



KIT CONTENT



This kit is composed of 3 items



PLUS or NEO sound board is required

PS-SPK4



PS-SW8




STERN WHITESTAR MOUNTING SET

- Stereo 2.1 harness
- 8 screws
- 8 spacers
- Cable zip ties
- Manual



TOOLS

Soldering iron Screwdriver



Hexsocket screwdriver




PREPARATION




Turn your machine **OFF**


- Open backbox
- Access the speaker panel

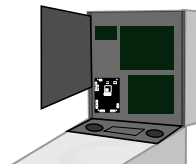

1 REMOVE ORIGINAL SPEAKERS AND ORIGINAL WIRING

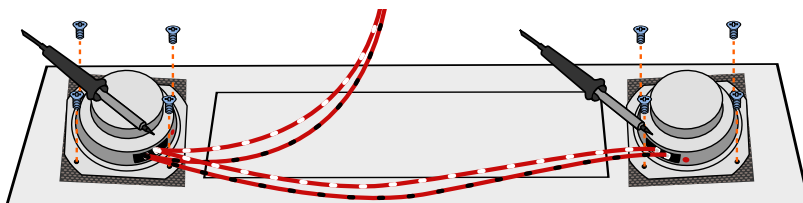

2 SCREW PINSOUND SPEAKERS

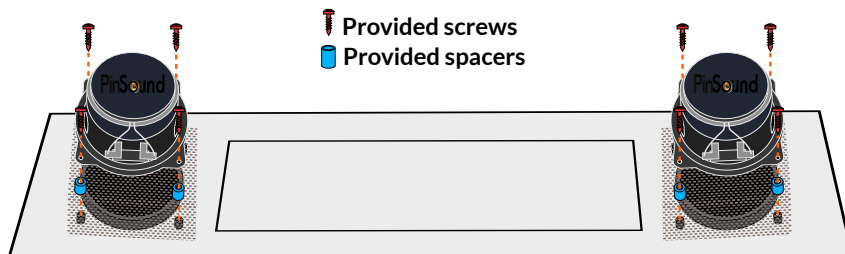


Provided screws



Provided spacers


3 REMOVE WHITESTAR AUDIO CABLE

PLUS / NEO sound board

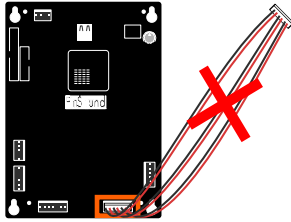


4 CONNECT STEREO 2.1 WIRING

PLUS / NEO sound board


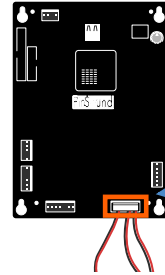


STEREO 2.1
SPEAKERS


5 CONNECT PIN SOUND SPEAKERS

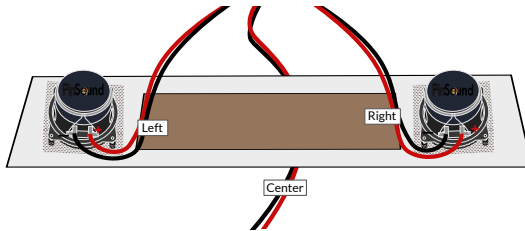


6 REMOVE ORIGINAL SUBWOOFER

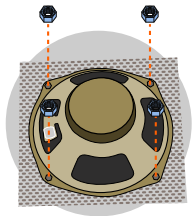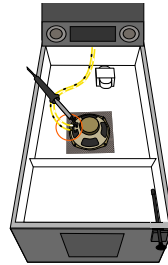

7 SCREW PIN SOUND SUBWOOFER

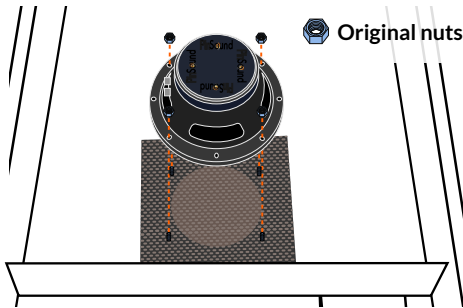


8 CONNECT SUBWOOFER

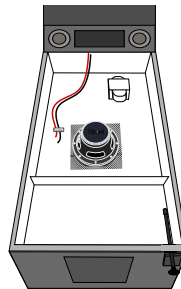

9 TURN YOUR MACHINE ON

NEED HELP?

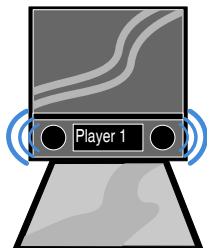

ENJOY !



www.pinsound.org/support