PinSound WPC CPU FPROM






ps-eprom-toolkit-wpc


The following steps need to be followed carefully. Any failures or consequences are at your own risk and liability. In no case does the warranty cover any damages or indirect damages caused by a careless installation or handling mistake. Please contact a technician if you do not feel confident doing it yourself.




TOOLS (1) OFF

(2)OPEN BACKBOX

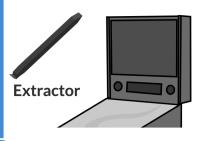

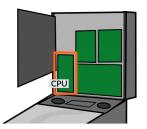


3) EXTRACT ORIGINAL EPROM

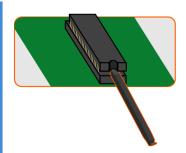


U6 WPC 89 / Security

G11 WPC 95

(4) INSERT NEW EPROM

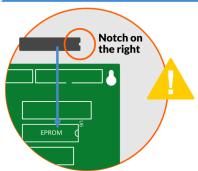

U6 WPC 89 / Security

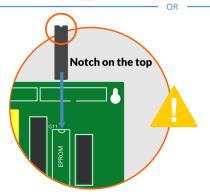

G11 WPC 95

(5) MACHINE ON



Have fun with your new game code!



www.pinsound.org/support