PinSound

Bally Williams WPC 95 kit

❖ KIT

Alcohol Pad 90° x2

x4

x1

x1

x4

x1

x4

x1
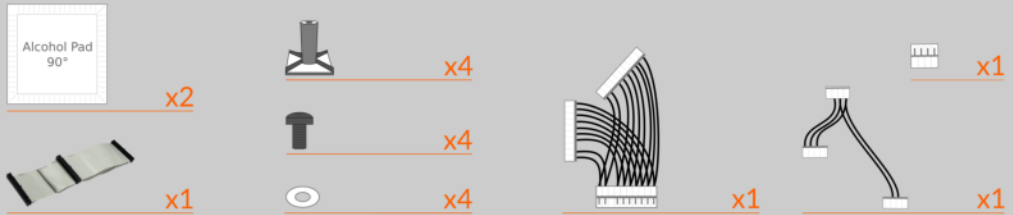
🔧 TOOLS

1 OFF
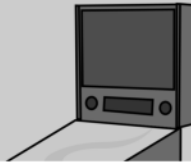
2 OPEN BACKBOX

3 SCREW ADHESIVE MOUNT FEET

A
B

✓ A +
✓ B +
✓ C +
✓ D +

C
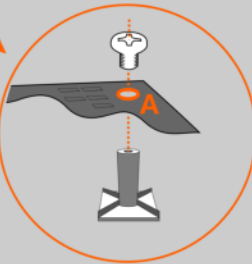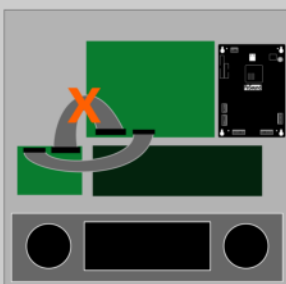D
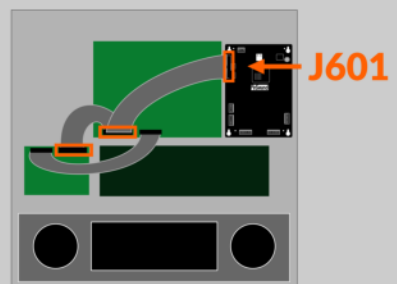
A

4 CLEAN

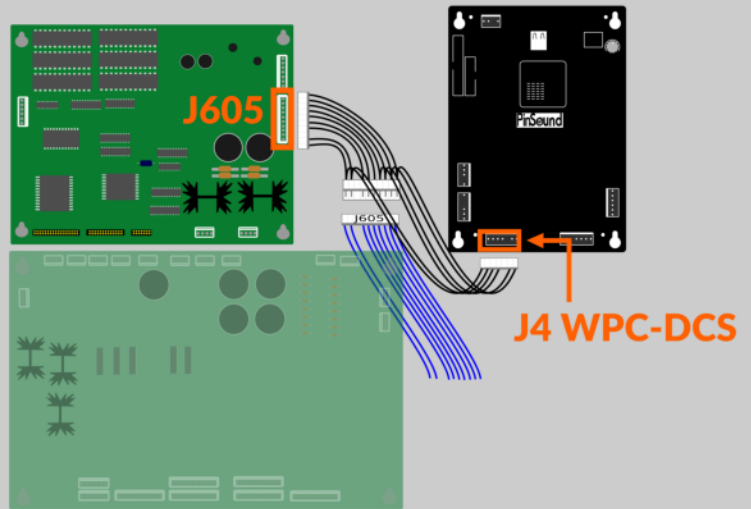Alcohol Pad 90°
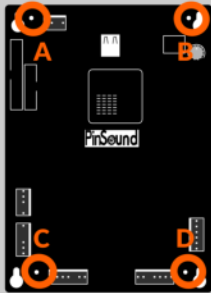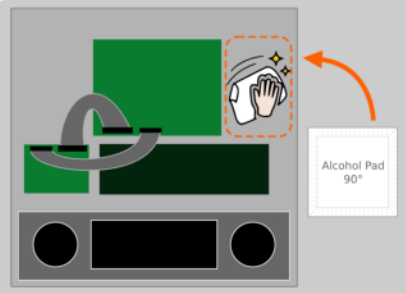
5 STICK BOARD

6 REMOVE RIBBON

X
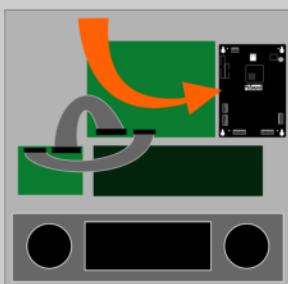
7 INSTALL NEW RIBBON

J601

8 CONNECT

① Remove J605 connector

② Connect splitter to J605 (Audio Video board)

③ Connect splitter to J4 (PinSound board)

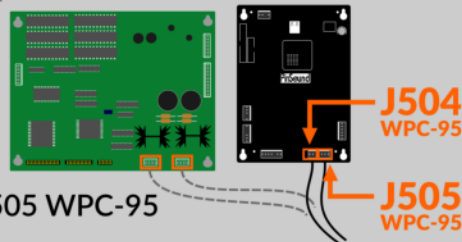④ Connect back J605 to splitter

J605

J4 WPC-DCS

9 CONNECT

① Remove J138 connector

② Connect splitter to J138 (Driver board)

③ Connect splitter to J3 (PinSound board)

④ Connect back J138 to splitter (use Z-connector if needed)

J138

J3 WPC-DCS
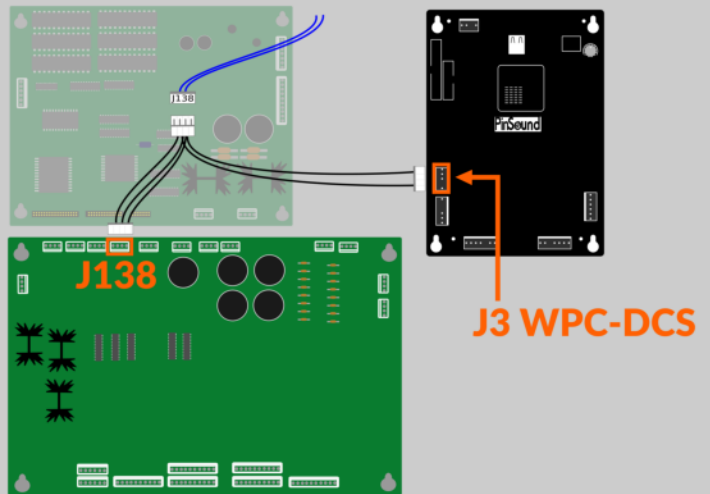
10 CONNECT

Audio Video Board
J504 +J505
(Speakers)

PinSound Board
J504 WPC-95 + J505 WPC-95
(Speakers)

J504
WPC-95

J505
WPC-95

11 LOAD USB